



SPL-5 MK2 Quick start

Get your SPL-5 MK2 up and running in four simple steps!



Step 1

Download the latest configuration software at <http://www.dateq.nl>.

Step 2

Request your installer license file at <http://www.dateq.nl>.

To adjust settings within the Dateq SPL model limiters an installer licence is required. If you have not (yet) received an installer licence or is it lost, the request page will help you getting one. Without the license file the software is read only.

Step 3

Copy the license file to the software folder and open the SPL-5 MK2 software.

Now power the SPL-5 MK2 and connect it to a USB port on your computer. On first connection the drivers of the SPL-5 MK2 are automatically installed.

Enter the requested password and hit the unlock button.

Step 4

Go configure your unit

Don't forget to check for firmware updates on installing the SPL-5 MK2. You can find the latest firmware release at <http://www.dateq.nl> or send an email to service@dateq.nl

