



# Core 1

PoE+ injector

---

User's manual





1. Carton Contents	2
2. Commissioning steps	2
3. Technical specifications	3
4. Overview	3

## 1. Carton Contents

- 1 PoE+ Core 1 injector
- 1 power cord
- 1 user manual

## 2. Commissioning steps


- 1 Connect the power cord to the PoE+ power injector and then a power outlet. The Power LED will light up.
2. Connect the network cable from the switch to the Data/In port.
3. Connect the cable to the P+D/OUT port to supply data and power to the device (direct connection or via a possible splitter).

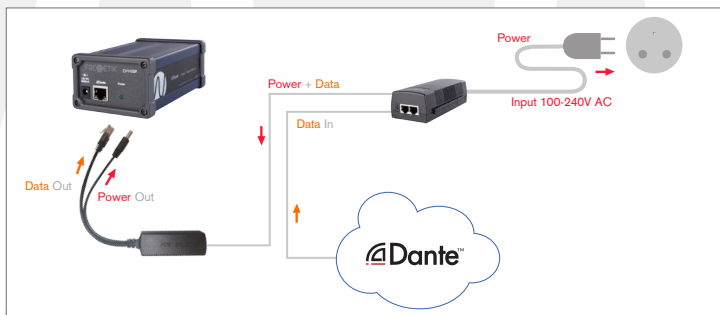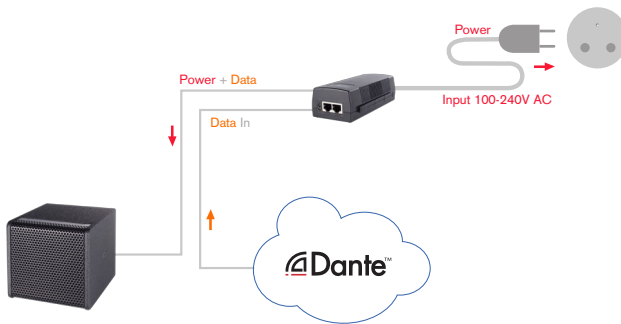

### 3. Technical specifications

Ref.	PS110DP
Standards	PoE 4, 5, 7, 8
Network Cables	100BaseTx Cat. 5 UTP/STP 10BaseT Cat. 3, 4, 5 UTP/STP
Power	PoE input 30W
Dimensions	42 × 64 × 145 mm (H x W x D)
Weight	0,18 kg
Operating temperature range	0 to 40°C
Humidity	10 to 90% (non-condensing)
Certifications	FCC Class A, CE

### 4. Overview

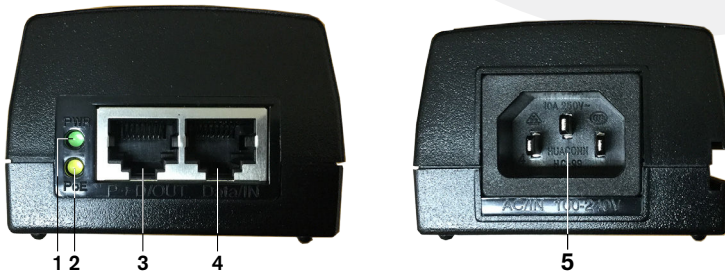

1. Mains power indicator diode
2. PoE power supply indication diode
3. Data output connector + PoE
4. Data input connector
5. Mains power connector



FRENETIK - 1 Allée d'Effiat - Le Parc de l'Événement - Bât. H  
91160 Longjumeau - France  
+33 (0)1 69 10 50 81  
**frenetik.fr**